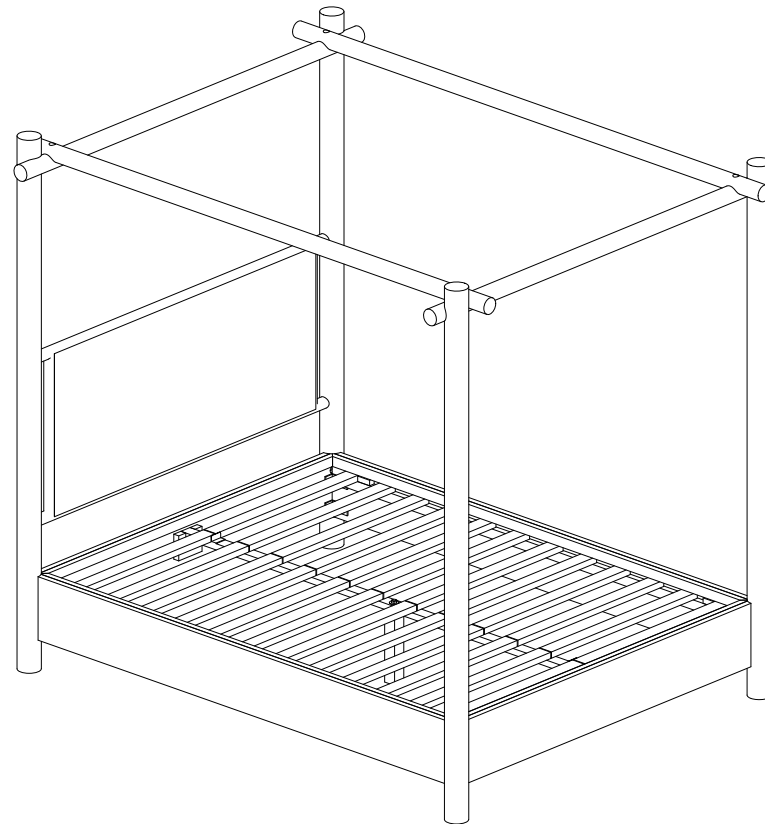


MOE'S

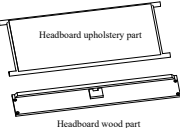


Assembly Instructions

DEVIN BED



Thank you for your purchase!

Parts and Hardware


(A) Headboard ,1x 	(B) Footboard ,1x 	(C) poster ,1x 
(D) Siderail ,1x 	(E) Center stretcher ,1x 	(F) poster stretcher L ,1x 
(G) poster stretcher S ,1x 	(H) Slates ,1x 	(I) Center Leg ,1x 
(J) Hexa Bolt ,8x 25X8 	(K) Washer ,17x 25X8 	(L) Hexa bolt ,1x 50X8 
(M) spanner ,1x (13no) 	(N) Allen bolt ,8x (30x8) 	(O) Allen key ,1x (5mm) 
(P) Allen bolt ,4x (70x8) 	(Q) Allen bolt ,4x (40x8) 	(R) Allen bolt ,8x (20x8) 
(S) Allen key ,1x (6mm) 		

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

Caution: The item is heavy, assembly
should be performed by two people.

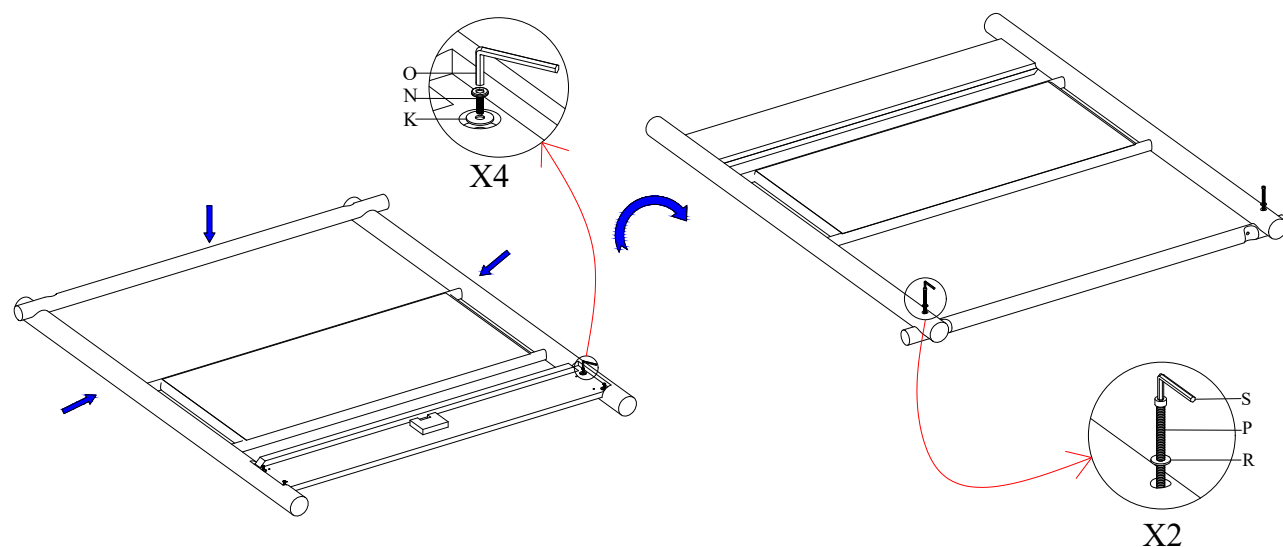
Step 1







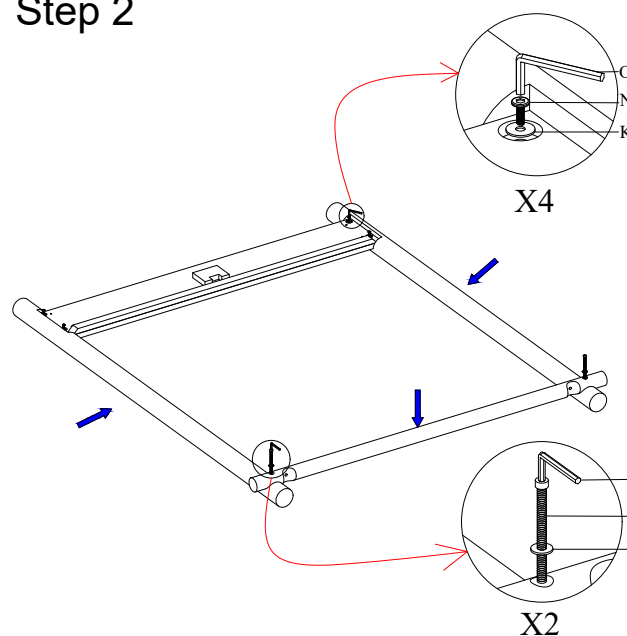
Step 2



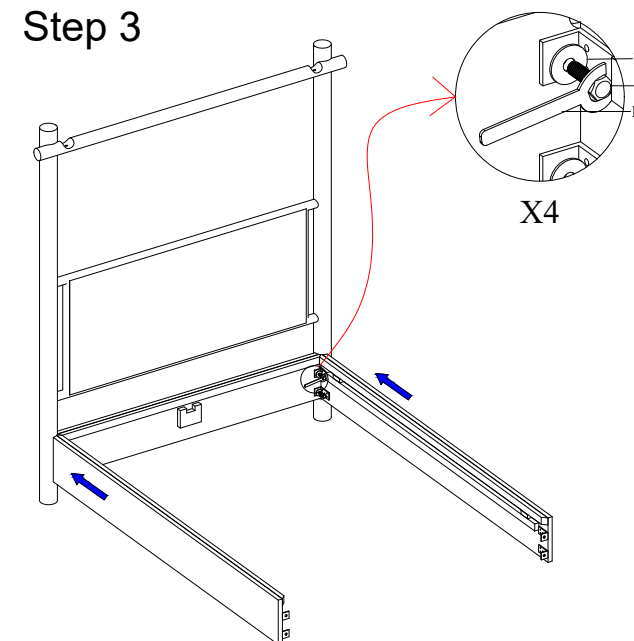Step 3



Parts and Hardware

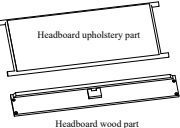
(A) Headboard ,1x 	(B) Footboard ,1x 	(C) poster ,1x 
(D) Siderail ,1x 	(E) Center stretcher ,1x 	(F) poster stretcher L ,1x 
(G) poster stretcher S ,1x 	(H) Slates ,1x 	(I) Center Leg ,1x 
(J) Hexa Bolt ,8x 25X8 	(K) Washer ,17x 25X8 	(L) Hexa bolt ,1x 50X8 
(M) spanner ,1x (13no) 	(N) Allen bolt ,8x (30x8) 	(O) Allen key ,1x (5mm) 
(P) Allen bolt ,4x (70x8) 	(Q) Allen bolt ,4x (40x8) 	(R) Allen bolt ,8x (20x8) 
(S) Allen key (5mm) 		

Notes


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

Caution: The item is heavy, assembly should be performed by two people.

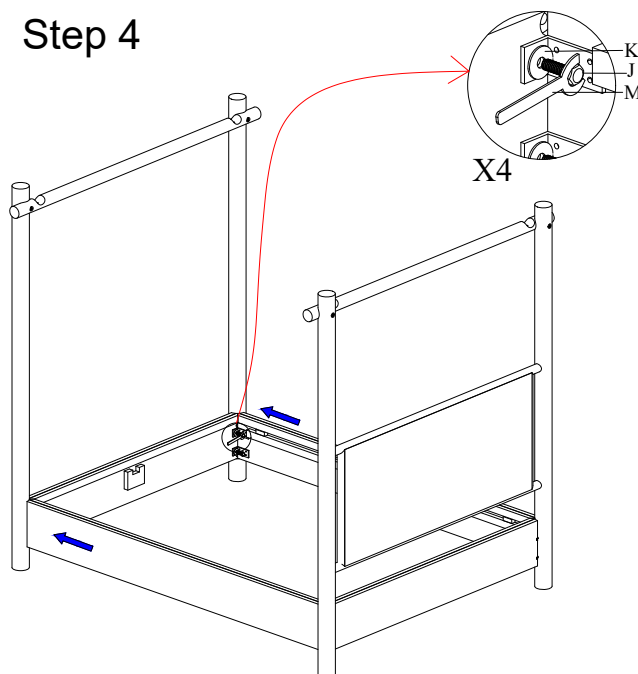
Step 4



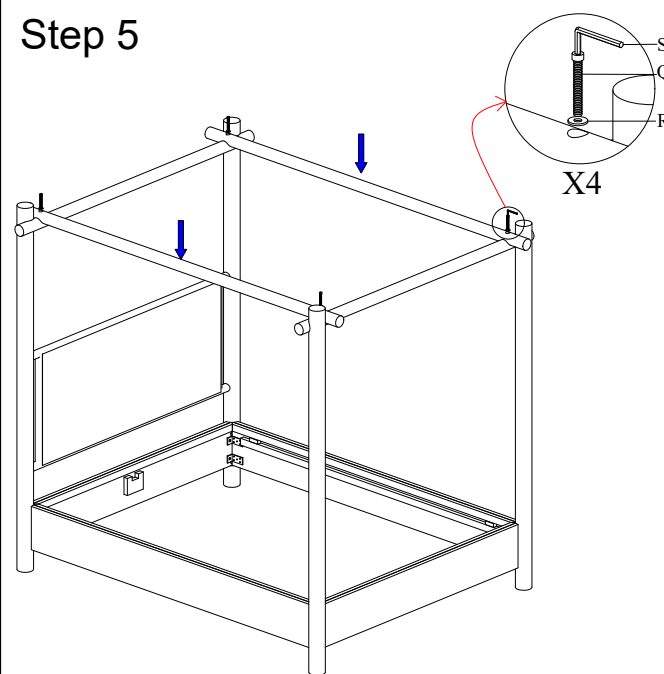Step 5



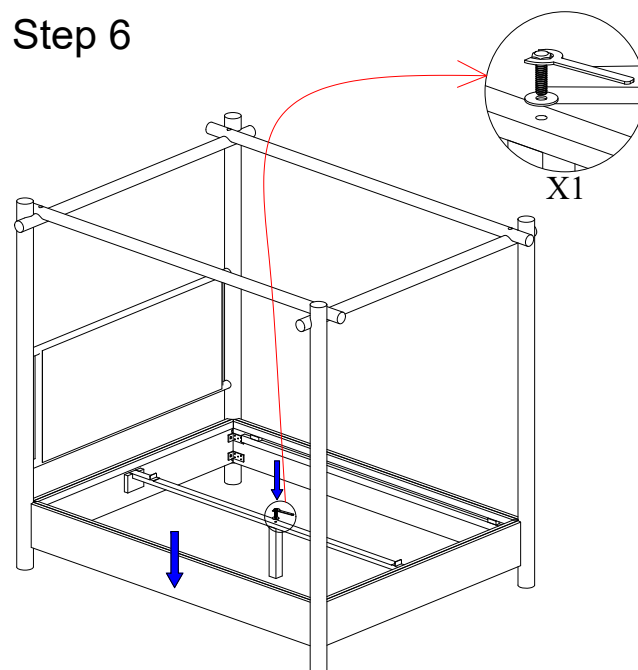Step 6



Step 7

