


MOE'S

Assembly Instructions


AVIS HORN INLAY MIRROR

PZ-1020-37

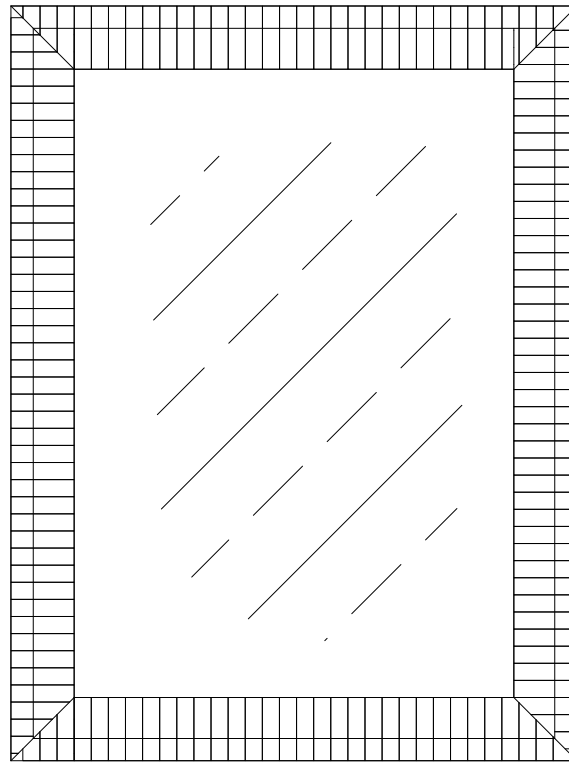

Thank you for your purchase!

Parts and Hardware

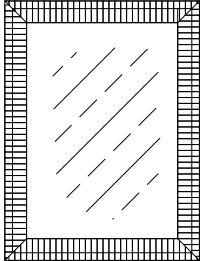
1. WOODEN MIRROR FRAME x 1 	
2. WALL ANCHOR x 2 L40 mm x Ø13 mm 	3. SCREW x 2 L38 mm x Ø7 mm 
4. SCREWDRIVER x 1 (NOT INCLUDED) 	5. POWER DRILL x 1 (NOT INCLUDED) 

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

Caution: The item is heavy, assembly should be performed by two people.


Step 1

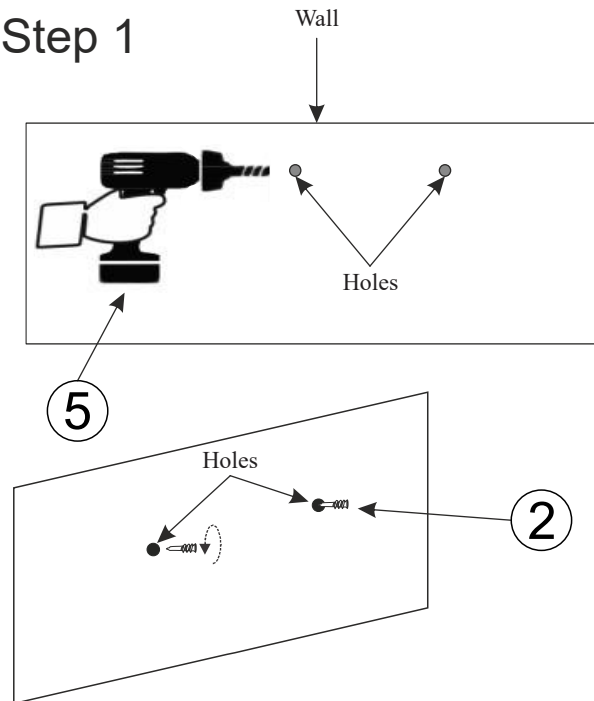

Step 2

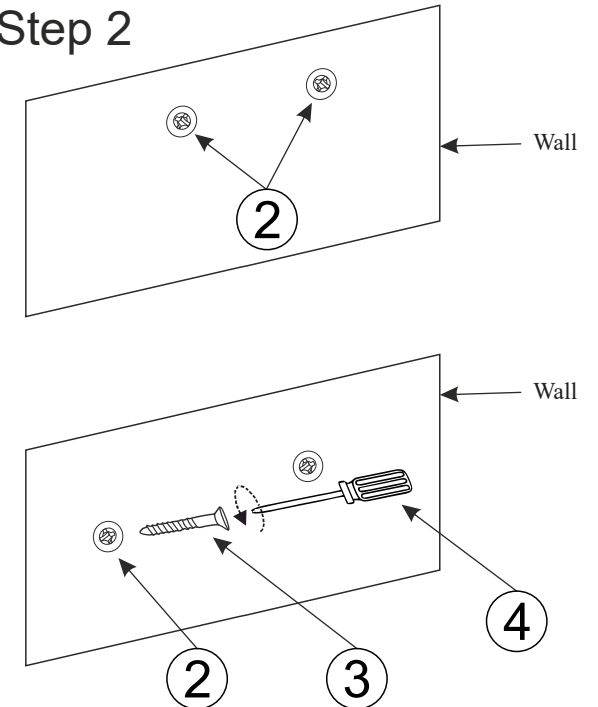

Step 3

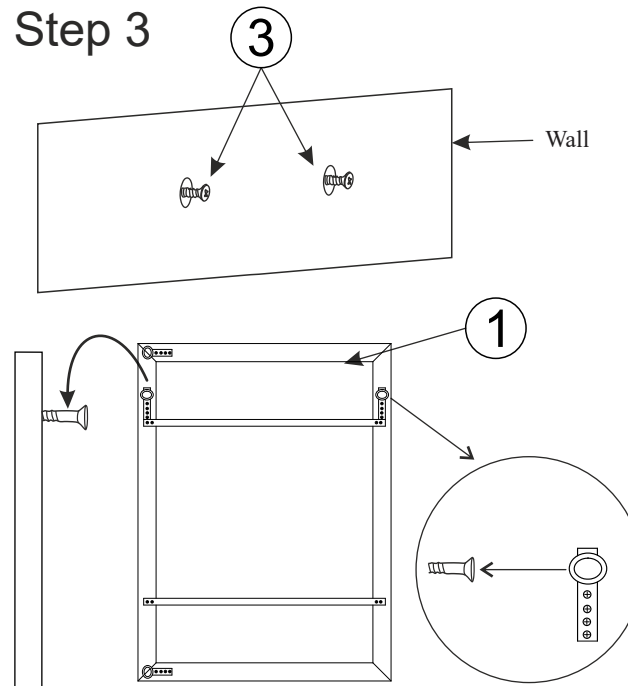

Step 4

